 


L1001/L1002

操作指南 | Setup Guide

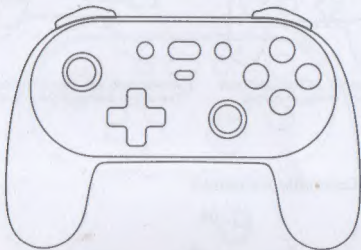

良值小钢炮NS/PC二代手柄

LINE Athena Wireless Controller PC Version

产品图片仅供参考

 
Pictures above for reference only




中国总代理





Manual

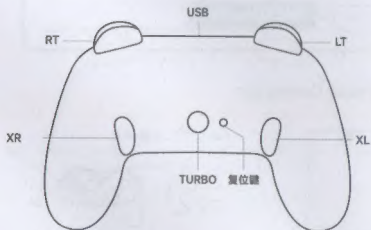

PC - 2.4g无线连接

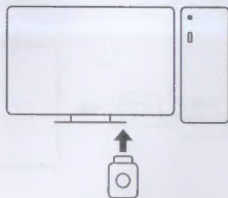 

按下适配器的配对键，直至
灯光闪烁

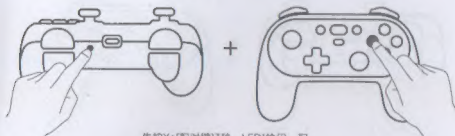  

先按X+[配对键]3秒，LED1快闪，配
对成功后LED2常亮

 


■ ■ ■ ■ ■
XINPUT模式

■ ■ ■ ■ ■
DINPUT模式




按住[HOME]2S，切换XINPUT/DINPUT模式

PC - 有线连接

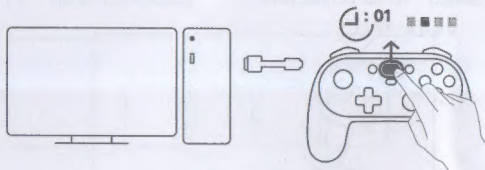

2

   Switch - 无线连接

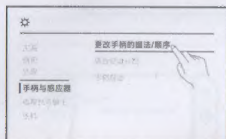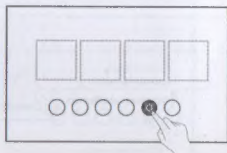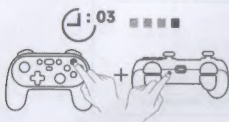



手柄功能设置 - 连发/自动连发设置

手动连发

首次按[Turbo]+任意动作键。设置手动连发

 
 
自动连发

再次重复按键操作可将手动连发设置为自动连发

清除连发

第三次重复操作，清除连发。或长按[Turbo]5S

请注意，长按连发键5秒后，连发功能与宏功能将会一起清除。

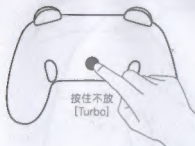


设置连发键，手柄实现自动连击


连发速率调节

[Turbo]+[右摇杆]往右，加快连发速率

 [Turbo]+[右摇杆]往左，减慢连发速率

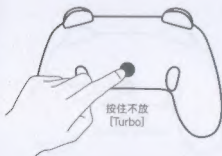

+

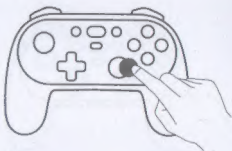 

一档

每秒连续连发5下

二档

每秒连续连发12下(默认)

三档

 
每秒连续连发20下



宏功能设定



选择[XR/XL]键录制宏功能：XR录制4号灯亮，XL录制1号灯亮

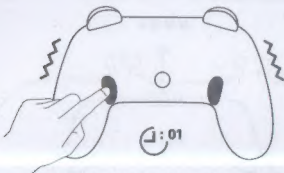

按[XR/XL]键结束录制，成功后震动提示。手柄通道灯恢复到正常指示灯

 
清除宏定义功能

按住连发键5秒清除[宏功能]键全部设置。清除成功后震动提示




循环宏定义功能

按下[Turbo]+[XR/XL]可打开/关闭循环宏定义功能

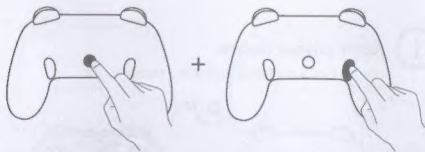

禁用/开启宏功能

 
长按[Turbo]+[XL]+[XR] 2秒切换宏功能（禁用/开启），成功后震动提示

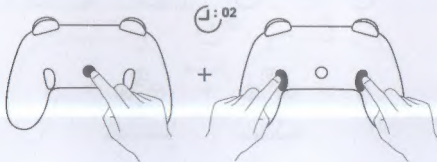



电量显示

 ⌂ : 03

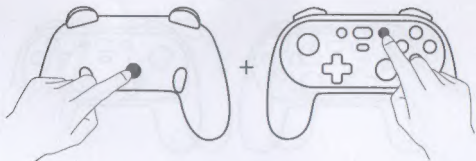


电量指示灯





手柄震动调节

 
[Turbo]+[右摇杆]往上, 增强震动强度
[Turbo]+[右摇杆]往下, 减弱震动强度

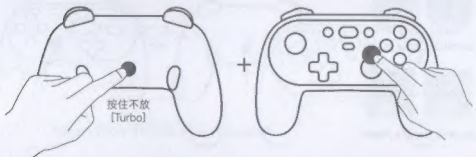

Switch - 有线连接

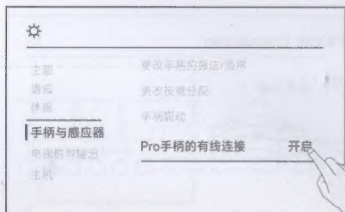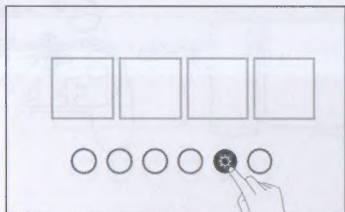  

底座 - 手柄

 


主机 - 手柄

3

PS3 - 2.4G无线连接

 
按下适配器的配对键，直至灯光闪烁

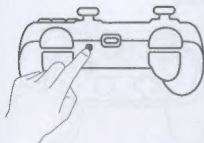

先按X+[配对键]3秒，LED1快闪，配对成功后LED1常亮

安卓连接 - 无线连接

 ⌂: 03 00 00 00 00



蓝牙 (📶)



以搜索设备

gamepad

IIIE Gamepad



iOS - 无线连接



⌂: 03 00 00 00 00



我的设备

XBOX Bluetooth

XBOX Bluetooth Gamepad



i 手柄休眠



 
自动休眠



手柄开机后 5分钟内无操作自动休眠




手动休眠



无线模式下 手柄开机时 长按(配对键)15秒断开连接并休眠

 i 手柄回连

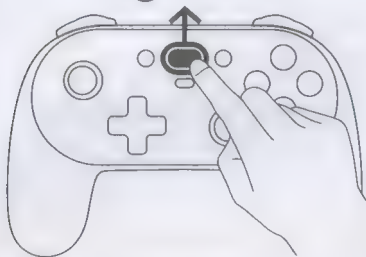

支持回连最后连接的设备



 
 
十字键左摇杆互换

同时按[START]+[L3]2S，十字键与左摇杆互换



摇杆画圆和画方切换

按住[START]+左摇杆中心，1秒切换画圆/画方功能。成功后震动提示。重复操作可来回切换

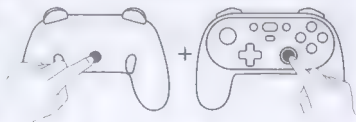


摇杆默认为画圆





十字键左四向八向切换

 同时按[SELECT]+[方向键右],3秒 切换十字键的左/右四模式
成功后震动提示

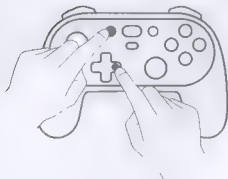

ABXY布局互换

  按下[SELECT]+[选项键]2S切换ABXY按键布局

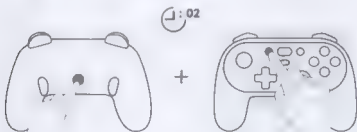

XBOX布局

任天堂布局



摇杆与扳机校准

按Home键或使用LED灯进入校准模式。长按A键开始校准。此时LED灯会以摇杆最大圈转速。扳机正常速度+2次。成功后按A键退出。校准完成。

默认状态：常规死区（中心有死区）。

转换为0死区：长按(Turbo)+L3+(R3)一秒。成功后震动提示。无+功能。



手柄充电指示

休眠模式



充电状态下

LED灯D4慢闪



充满状态下

LED灯D4常亮

连接模式



 
充电状态下

LED灯D4常亮+震动



充满状态下

LED灯D4常亮

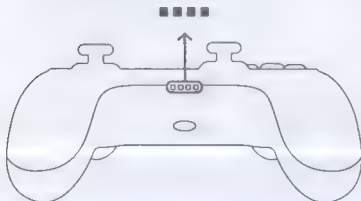




手柄复位



L1001/L1002



操作指南 | Setup Guide

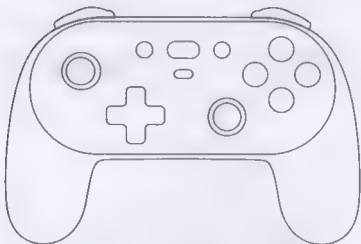 


IINE Athena Wireless Controller PC Version

  Pictures above for reference only



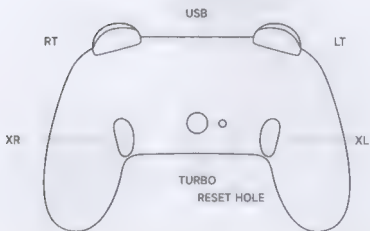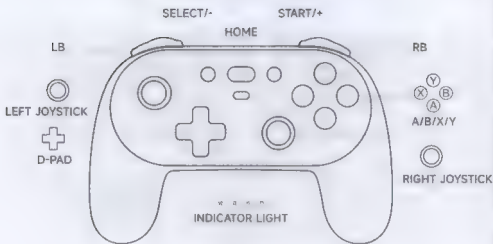

 PC - Wireless Connection via 2.4G Receiver

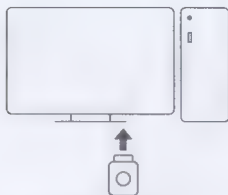

Press the receiver [Pairing] button until the light flashes.



Hold the controller [X] and [Pairing] buttons for 3 seconds. LED1 will flash quickly
After successful pairing, LED2 will stay lit



XINPUT MODE



DINPUT MODE

 
 
 
Hold the [Home] button for 2 seconds to switch the mode

PC - Wired Connection



2

Switch - Wireless Connection

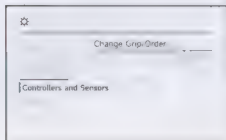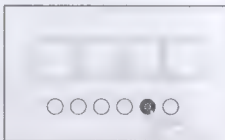




Controller Function Settings - Turbo Function Settings

Manual Turbo Mode

 Press the [Turbo] and any action buttons to activate manual turbo.

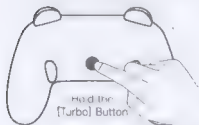


Auto Turbo Mode

Repeat the operation for the second time to switch manual turbo mode to auto turbo mode.

Clean Turbo Function

Repeat the operation for the third time or hold the [Turbo] button for 5 seconds to clean the turbo function.

 Please note: Holding the Turbo button for 5 seconds will clean both the Turbo and Macro functions simultaneously.




Set Turbo function for buttons to automatically combo.



Turbo Rate Settings

Increase: Hold the [Turbo] and push the [Right Joystick] to the right.

 Decrease: Hold the [Turbo] and push the [Right Joystick] to the left.

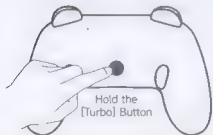

+



Level 1

5/s

Level 2


12/s (default)

Level 3

20/s




 Macro Function Settings

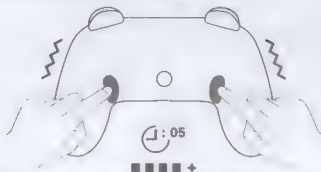

Hold the [XR/XL] button for 5 seconds to enter recording mode

 
Please note: This action will clear both the Turbo function and the Macro function simultaneously

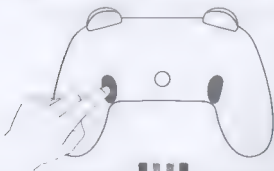

Press the [XR/XL] button to record the macro

[XR] Recording: LED4 will light up

 [XL] Recording: LED1 will light up

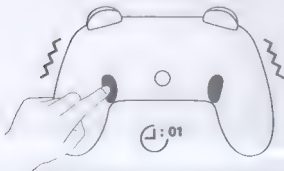

Press the [XR/XL] button again to stop recording

The controller will rumble to confirm success

Controller indicator lights will return to normal status

 
Clear Macro Function

Hold the [Turbo] button for 5 seconds to clear the macro function.
The controller will rumble to confirm success.




Loop Macro Function

Press the [Turbo] and [X], [X], [L] buttons to switch loop macro on/off.

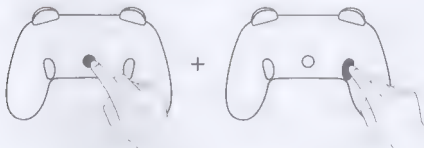


Enable/Disable Macro Function

 Hold the [Turbo], [X], and [R] buttons for 2 seconds to switch macro functionality.
The controller will rumble to confirm success.

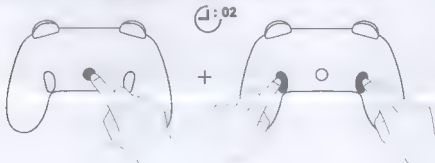

Battery Power Display

  : 03

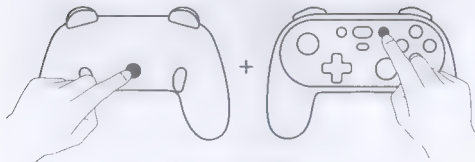


Battery Indicator Light





Rumble Adjustment

Increase: Hold the [Turbo] button and push the [Right] joystick up.


 
Decrease: Hold the [Turbo] button and push the [Right] joystick down.



Switch - Wired Connection

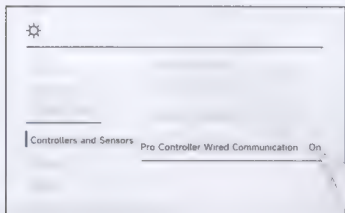  

Dock - Controller

  


Console - Controller

3


PS3 - Wireless Connection via 2.4G Receiver

 Press the receiver [Pairing]
button until the light flashes

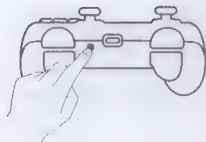

Hold the controller [X], and [Pairing] button for 3 seconds LED1
will flash quickly
After successful pairing LED1 will stay lit

 Android - Wireless Connection



Bluetooth (Bluetooth icon)



MY DEVICES

Gamepad

IINE Gamepad



iOS - Wireless Connection



MY DEVICES

XBOX Bluetooth Gamepad

 
XBOX Bluetooth Gamepad



Controller Sleep Mode




AUTO SLEEP MODE



The controller will enter sleep mode after 5 minutes of inactivity.




 MANUAL SLEEP MODE



In wireless mode, long-press the [Pairing] button for 5 seconds to disconnect and enter sleep mode.

 Controller Reconnect

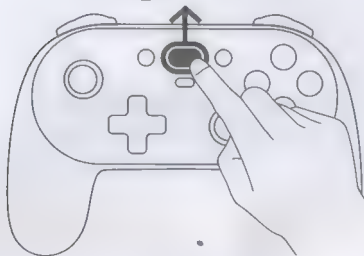

After powering on, press the [Pairing] button to reconnect to the last paired device.



D-Pad and Left Joystick Swap

Hold the [Start] button and press the [Left Joystick] down for 2 seconds to swap.



START + L (Left Joystick) = D-Pad and Left Joystick Swap



Joystick Circle/Square Control Switch Settings

 
Hold the [Turbo] button and [Left/Right Joystick] for 1 seconds to switch.
The controller will rumble to confirm success.



Joystick Circle Mode



Joystick Square Mode

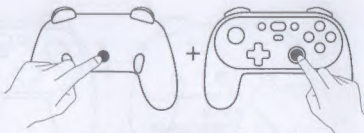


The joystick control area is a circle by default.



D-Pad 4-Way/8-Way Switch Settings

 Hold the [Select] button and press right on the [D-pad] for 3 seconds to switch. The controller will rumble to confirm success.



ABXY Layout Switch

Hold the [Select] and [Option] buttons for 2 seconds to switch.



+



Xbox Layout



Switch Layout



Joystick and Trigger Calibration

1. Press [Home] + [Screenshot] to make [LED1] blink slowly, entering Calibration Mode.
2. Press [A] to start calibration; [LED2] will start blinking.
3. Rotate the joystick fully 3 times and press the trigger 3 times.
4. After completing the steps, press [A] to exit. Calibration is complete.



Joystick Dead Zone Mode Switch Settings

Default Dead Zone: Standard center-area dead zone
Switch to Zero Dead Zone: Hold the [C], [L3] and [R3] buttons for 3 seconds.
The controller will rumble to confirm success (No memory function).



Controller Charging Indicators

SLEEP MODE



CHARGING STATUS
LED1-LED4 flash slowly



FULL CHARGE STATUS
LED1-LED4 stay lit.

 
CONNECTION MODE



CHARGING STATUS
The platform-specific
LED will flash.



FULL CHARGE STATUS
LED1-LED4 stay lit.

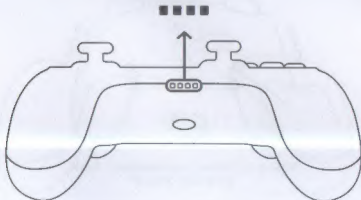



Controller Reset

